

Series

Application Note

Number 3176

# **Overview of Two-Wire and Four-Wire** (Kelvin) Resistance Measurements

Both two-wire and four-wire resistance measurements are features of all Keithley digital multimeters (DMMs) and SouceMeter<sup>®</sup> instruments, including the Models 2110, 2100, 2000, 2001, and 2002 DMMs, the Series 2700 DMM/dataloggers, the Series 3700 DMM/switch mainframes, and the Series 2400 and 2600 SourceMeter source measurement units (SMU). This 4W measurement capability allows users to make low resistance measurements more accurately.

# **Two-Wire Resistance Measurements**

Resistance measurements are often made using the two-wire method shown in *Figure 1*. A test current is forced through the test leads and the resistance (R) under test. The meter then measures the voltage across the resistance through the same set of test leads and computes the resistance value accordingly.





The main measurement issue with the two-wire method, as applied to low resistance measurements, is that the total lead resistance ( $R_{LEAD}$ ) is added to the measurement. Since the test current (I) causes a small but significant voltage drop across the lead resistances, the voltage ( $V_M$ ) measured by the meter won't be exactly the same as the voltage ( $V_R$ ) directly across the test resistance (R), and considerable error can result. Typical lead resistances lie in the range of  $10m\Omega$  to  $1\Omega$ , so it's very difficult to obtain accurate two-wire resistance measurements when the resistance under test is lower than  $100\Omega$ . For example, using test leads with a  $100m\Omega$  combined resistance to perform a two-wire resistance measurement on a  $500m\Omega$  resistor will result in a 20%

measurement error in addition to that of the instrument. See *Table 1* for another example.

## Table 1: Example 2W measurement errors.

	DUT	Lead Path Resistance	% Lead-contributed Error
2 Ω	1Ω	20 mΩ	2%
$4 \Omega$	1 Ω	20 mΩ	<0.1%

# Four-Wire (Kelvin) Resistance Measurements

Due to the limitations of the two-wire method, the four-wire (Kelvin) connection method shown in *Figure 2* is generally preferred for low resistance measurements because it reduces the effect of test lead resistance. These measurements can be made using a DMM, SourceMeter SMU instrument, or a separate current source and voltmeter. With this configuration, the test current (I) is forced through the test resistance (R) via one set of test leads, while the voltage (V<sub>M</sub>) across the DUT is measured through a second set of leads (sense leads). Although some small current (typically less than 100pA) may flow through the sense leads, it is usually negligible and can generally be ignored for all practical purposes. The voltage drop across the sense leads is negligible, so the voltage measured by the meter  $(V_M)$  is essentially the same as the voltage  $(V_R)$  across the resistance (R). As a result, the resistance value can be determined much more accurately than with the two-wire method.



Figure 2. The effect of test lead resistance can be reduced using the fourwire (Kelvin) connection method.

Note that the voltage-sensing leads should be connected as close to the resistor under test as possible to avoid including part of the resistance of the test leads in the measurement.

Specifications are subject to change without notice. All Keithley trademarks and trade names are the property of Keithley Instruments, Inc. All other trademarks and trade names are the property of their respective companies.



KEITHLEY INSTRUMENTS, INC. 28775 AURORA RD. CLEVELAND, OH 44139-1891 440-248-0400 Fax: 440-248-6168 1-888-KEITHLEY www.keithley.com

#### BELGIUM

Sint-Pieters-Leeuw Ph: 02-3630040 Fax: 02-3630064 info@keithley.nl www.keithley.nl

#### ITALY

Peschiera Borromeo (Mi) Ph: 02-5538421 Fax: 02-55384228 info@keithley.it www.keithley.it

## SINGAPORE

Singapore Ph: 65-6747-9077 Fax: 65-6747-2991 sea@keithley.com www.keithley.com.sg

#### CHINA Beijing

Ph: 86-10-8447-5556 Fax: 86-10-8225-5018 china@keithley.com www.keithley.com.cn

#### JAPAN

Tokyo Ph: 81-3-6714-3070 Fax: 81-3-6714-3080 info.jp@keithley.com www.keithley.jp

#### TAIWAN

Hsinchu Ph: 886-3-572-9077 Fax: 886-3-572-9031 info\_tw@keithley.com www.keithley.com.tw

#### FRANCE

Les Ulis Ph: 01-69868360 Fax: 01-69868361 info@keithley.fr www.keithley.fr

#### KOREA

Seoul Ph: 82-2-574-7778 Fax: 82-2-574-7838 keithley@keithley.co.kr www.keithley.co.kr

#### UNITED KINGDOM Bracknell

Ph: 044-1344-392450 Fax: 044-1344-392457 info@keithley.co.uk www.keithley.co.uk

#### GERMANY

Germering Ph: 089-84930740 Fax: 089-84930734 info@keithley.de www.keithley.de

#### MALAYSIA

Penang Ph: 60-4-643-9679 Fax: 60-4-643-3794 sea@keithley.com www.keithley.com

## INDIA

Bangalore Ph: 080-30792600 Fax: 080-30792688 support\_india@keithley.com www.keithley.in

#### NETHERLANDS

Son Ph: 040-2675502 Fax: 040-2675509 info@keithley.nl www.keithley.nl