


DOCKING PLATE KIT

KEYSIGHT PART NUMBER E5092-60101

QTY.	CONTENTS	PART NO.
2	DOCKING PLATE ASSEMBLY	E5092-60102
2	TRIM-FR FR SIDE	E5052-25121
2	TRIM-FR FR SIDE	5041-9174

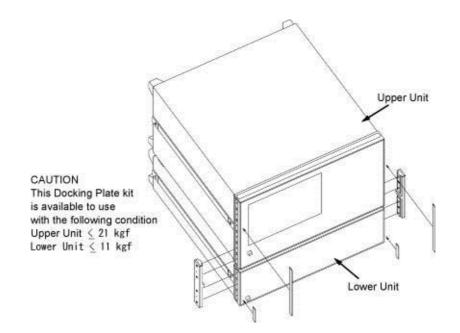



DO NOT ATTEMPT TO DOCKING PLATE SEPARATELY WITH HARDWARE PROVIDED.

LIFT BOTH PRODUCTS AT THE SAME TIME AFTER APPLYING THIS KIT.

INSTRUCTIONS

- 1. REMOVE SIDE TRIM STRIPS OF BOTH UNITS (UPPER&LOWER).
- 2. ATTACH DOCKING ASS'Y WITH 4 SCREWS PER SIDE.
- 3. PASTE THE NEW SIDE TRIM STRIPS TO BOTH UNITS AS ABOVE INSTRUCTION.

INSTRUCTION SHEET NO.E5092-90001 **E5092-60101**