



Agilent U1452A/U1452AT/U1451A Insulation Tester

Quick Start Guide

Standard accessories included in your purchase

The following accessories are shipped standard with the U1452A, U1452AT, and U1451A testers:

- ✓ Hard carrying case
- ✓ Alligator clips (red and black)
- ✓ Test leads (red and black)
- ✓ 19 mm probes (red and black)
- ✓ 4 mm probes (red and black)
- ✓ IR to USB cable
- ✓ Four 1.5 V AA alkaline batteries
- ✓ Printed copy of the U1452A/U1452AT/U1451A Quick Start Guide (this document)

Model U1452A also includes the following accessories:

- ✓ Remote switch probe and adapter
- ✓ U1117A IR to Bluetooth adapter
- ✓ Printed copy of the U1117A Operating Instructions

If any item is missing or damaged, keep the shipping materials and contact the nearest Agilent Sales Office.

NOTE

The descriptions and instructions in this guide apply to the U1452A, U1452AT, and U1451A Insulation Tester.

Model U1452A appears in all illustrations. The word *tester* is used to represent all models.

All related documents and software are available for download at www.agilent.com/find/hhTechLib.




U1452A/U1452AT/U1451A Insulation Tester

Install or Change the Batteries


Install or Change the Batteries

The tester is powered by four 1.5 V AA alkaline batteries (included in the shipment).

Before installing or changing the batteries, pull from a corner and stretch the orange rubber holster to remove it.

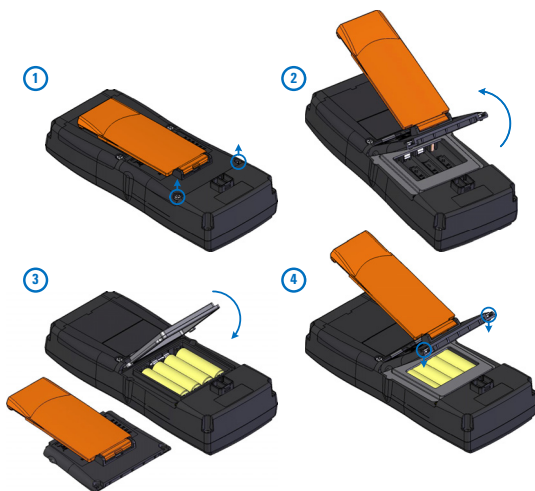

Turn On the Tester

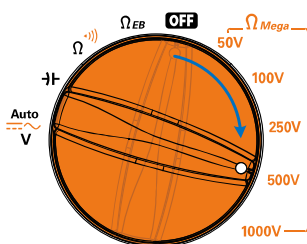


Turn the rotary switch from the **OFF** position to any other position to begin making measurements.

U1452A/U1452AT/U1451A Insulation Tester

The Tester at a Glance

The Tester at a Glance

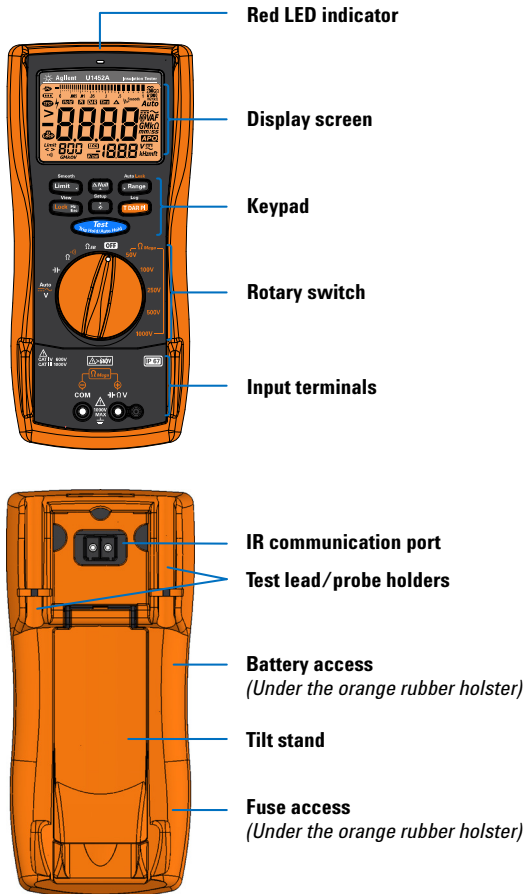

U1452A/U1452AT/U1451A Insulation Tester

Using the Rotary Switch

Using the Rotary Switch

NOTE

Press [**T DAR PI**] to select the alternate measurement function(s) or test methods for insulation resistance tests.

Legend	Measurement function	Model		
		U1452A	U1452AT	U1451A
Ω_{Mega} 50V	50 V insulation resistance test, T, DAR, PI ^[1]	✓	✓	-
Ω_{Mega} 100V	100 V insulation resistance test, T, DAR, PI ^[1]	✓	✓	-
Ω_{Mega} 250V	250 V insulation resistance test, T, DAR, PI ^[1]	✓	-	✓
Ω_{Mega} 500V	500 V insulation resistance test, T, DAR, PI ^[1]	✓	-	✓
Ω_{Mega} 1000V	1000 V insulation resistance test, T, DAR, PI ^[1]	✓	-	✓
Ω_{EB}	Earth-bond resistance, T	✓	✓	✓
$\Omega^{(c)}$	Resistance, Continuity	✓	✓	✓
\rightarrow	Capacitance	✓	✓	✓
Auto V	Auto (V), DC V, AC V	✓	✓	✓











^[1] **DAR** and **PI** tests for models U1452A and U1452AT only.

WARNING

Remove the test leads from the measuring source or target before changing the rotary switch position.



Refer to the *U1452A/U1452AT/U1451A User's Guide* for a complete list and description of all rotary switch labels.

Using the Keypad

Legend	Key response when pressed for:	
	Less than 1 second	More than 1 second
	IR Test: Initiates an insulation test ^[1] as long as [Test] is held ( is shown) — the tester sources (outputs) a high voltage and measures insulation resistance	
	EBR Test: Initiates an earth-bond resistance test ^[2] as long as [Test] is held ( is shown)	Auto Hold: Automatically freezes the present reading once the reading is stable ^[3]
View  	Lock: Locks the insulation test or earth-bond resistance test ^[4]	View (U1452A and U1452AT): Enters the Log review menu
	Hz: Displays the frequency (when the rotary switch is in the V position)	
Log  	Esc: Discards the changes made in the Setup menu	
	Selects the alternate measurement function(s)	
	T/Time: Configures the tester for a timed test ^{[4][5]}	Log (U1452A and U1452AT): Starts the data Log
	DAR (U1452A and U1452AT): Configures the tester for a dielectric absorption ratio test ^{[1][5]}	
Smooth 	PI (U1452A and U1452AT): Configures the tester for a polarization index test ^{[1][5]}	
	Limit: Enables Limit comparison	Smooth: Enables Smooth
Auto Leak  Auto 	Range: Sets a manual range	Auto: Enables autoranging
	Leak (U1452A and U1452AT): Displays the leakage current ^[4]	

U1452A/U1452AT/U1451A Insulation Tester

Using the Input Terminals

Legend	Key response when pressed for:	
	Less than 1 second	More than 1 second
	Null: Enables Null	-
	* : Enable or disable the LCD backlight	Setup: Enters the Setup menu

[1] When the rotary switch is in one of the Ω_{Mega} position.

[2] When the rotary switch is in the Ω_{EB} position.


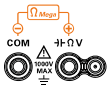
[3] When the rotary switch is **NOT** in one of the Ω_{Mega} or the Ω_{EB} position.

[4] When the rotary switch is in one of the Ω_{Mega} or the Ω_{EB} position.

[5] Press [Test] to start the test.

Using the Input Terminals

WARNING To avoid damaging this device, do not exceed the input limit.

Rotary position	Input terminals	Overload protection
		1000 Vrms
Ω_{EB}		1000 Vrms for short circuit <0.3 A
Ω_{Mega} Ω_{Mega} 50V 100V Ω_{Mega} Ω_{Mega} Ω_{Mega} 250V 500V 1000V		440 mA/1000 V, 30 kA fast-acting fuse


Insulation Resistance (IR) Test

Ensure that the device-under-test (DUT) is de-energized before performing any resistance measurement.

The tester automatically detects if the circuit is energized. If the external voltage is detected to be greater than 30 V, the test is inhibited and the voltage hazard symbol (⚡) is shown on the display.


CAUTION

DO NOT perform insulation resistance test in distribution systems with voltages higher than 600 V.

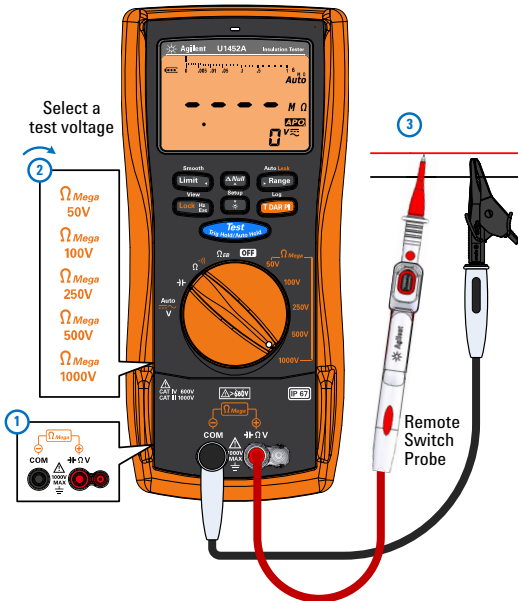

U1452A/U1452AT/U1451A Insulation Tester


Insulation Resistance (IR) Test

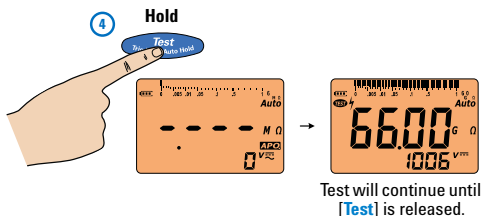


NOTE

When an insulation test is in progress, the red LED indicator at the top of the tester will blink every 2 seconds (if the Limit function is not enabled).


Using the Remote Switch Probe

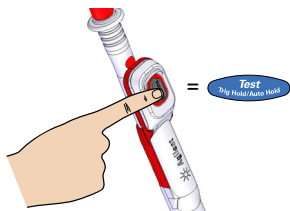

Locking the Test for IR/EBR Tests

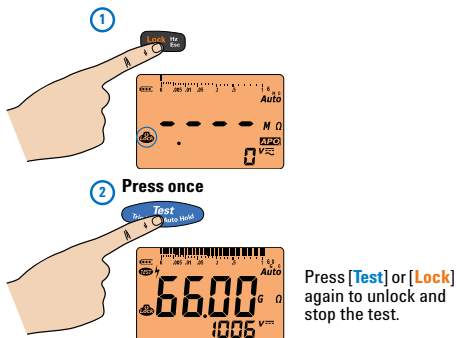

Performing PI/DAR/T Tests

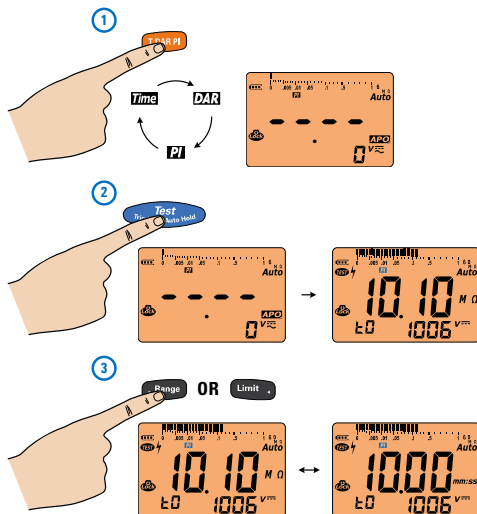

Polarization Index (PI) = IR 10 minutes / IR 1 minute

Dielectric Absorption Ratio (DAR) = IR 60 seconds / IR 30 seconds
(default; can be changed to IR 60 seconds / IR 15 seconds in Setup)

Timed (T) = IR 1 minute (default; can be changed in Setup)

NOTE


- Press [**Range**] or [**Limit**] to toggle the display between the timer and the measured value during PI, DAR, or T tests.
- **Err** is shown on the display if the IR is greater than the maximum range or less than 0.001 MΩ after t1/t15/t30; if the test is interrupted by the user; or if the tester's battery is low.

U1452A/U1452AT/U1451A Insulation Tester

Insulation Resistance (IR) Test

Viewing Leakage Current

Press **[Range]** after the IR test to view the leakage current; or press **[Range]** during the IR test to view the leakage current if the IR test is locked (see [page 8](#)).

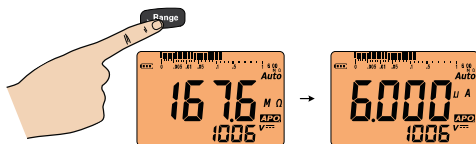

NOTE

Viewing the leakage current for DAR, PI, or T tests:

Press **[Range]** first before selecting the PI, DAR, or T test. Then, press **[Test]** to view leakage current.


U1452A/U1452AT/U1451A Insulation Tester

Earth-Bond Resistance (EBR) Test

Earth-Bond Resistance (EBR) Test

CAUTION

The tester automatically detects if the circuit is energized. If the external voltage is detected to be greater than 2 V, the test is inhibited. Disconnect the tester and remove power from the circuit before proceeding.

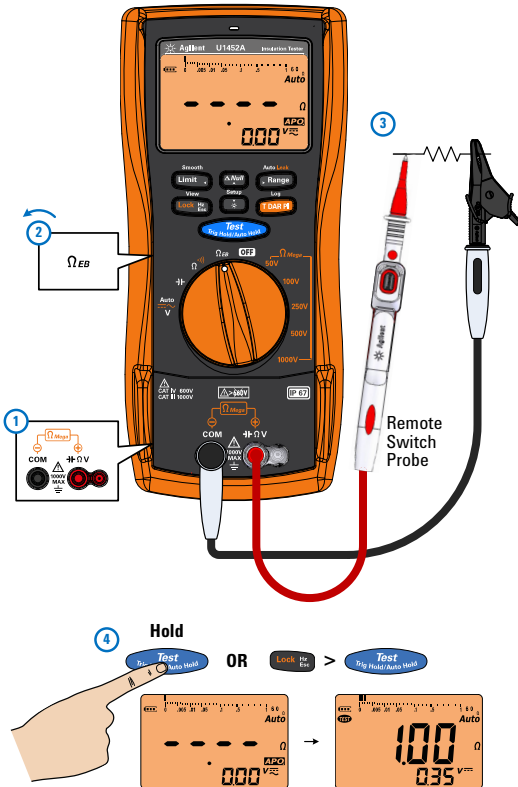


Voltage Measurements


The **Auto** function is able to automatically

- Identify the signal component (AC or DC) of an electrical source to be indicated on the primary display, and
- Select a suitable measurement range according to the AC+DC reading


The symbol **Auto** blinks during the identification

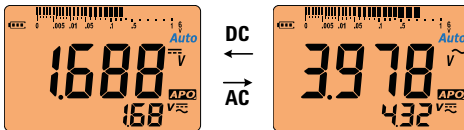


The AC+DC value is shown in the secondary display

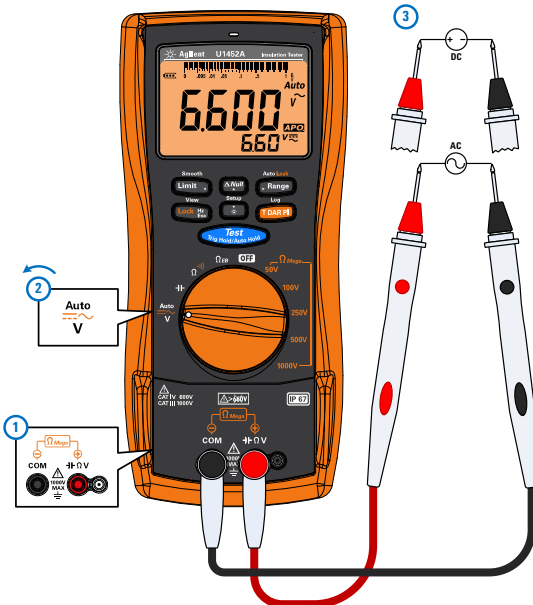

Resistance Measurement

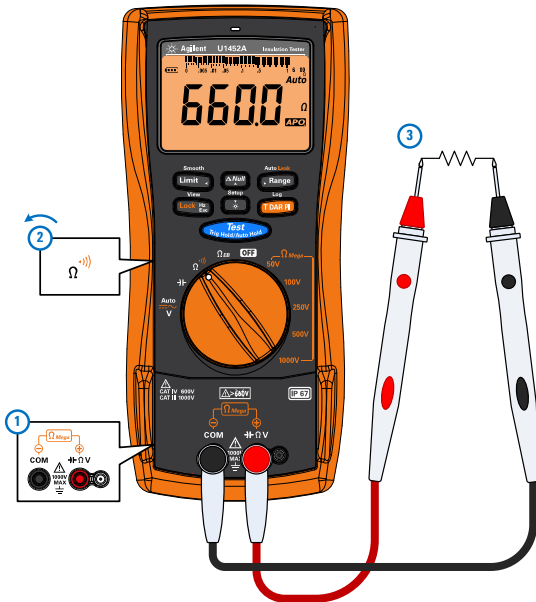

Removing Test Lead Resistance

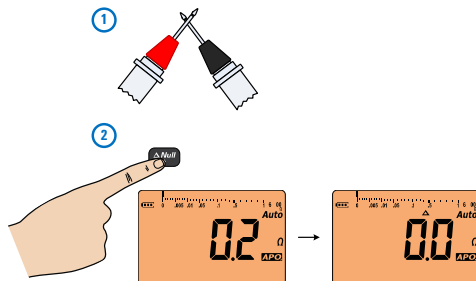


U1452A/U1452AT/U1451A Insulation Tester

Continuity Test

CAUTION


To avoid possible damage to your tester or to the equipment under test, disconnect the circuit power and discharge all high-voltage capacitors before performing continuity tests.

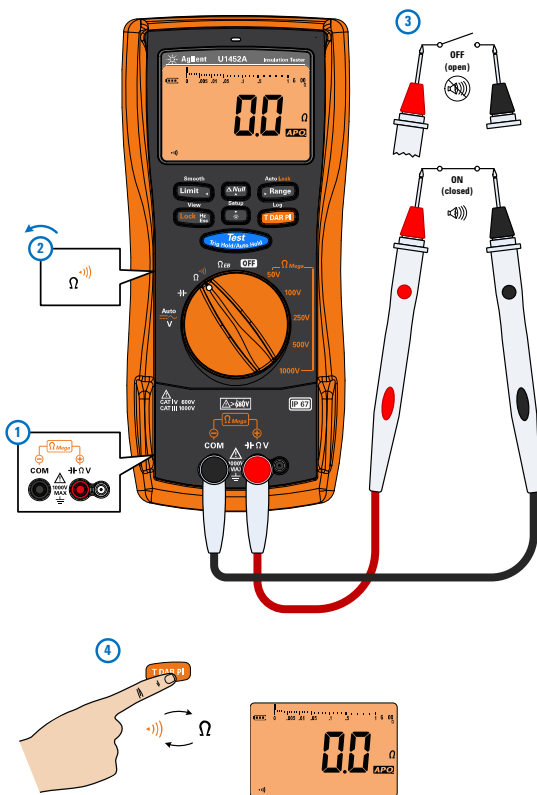

Capacitance Measurement

CAUTION To avoid possible damage to the tester or to the equipment under test, disconnect circuit power and discharge all high-voltage capacitors before measuring capacitance.

Before proceeding with capacitance measurements, first use the **DC V** function to confirm that the capacitor is fully discharged.

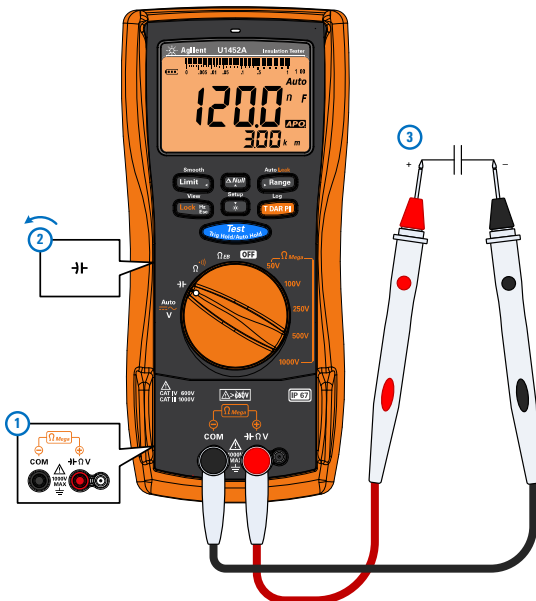**NOTE**

The cable length equivalent of the circuit under test is shown in the secondary display. The default scale is 1 km per 40 nF.

U1452A/U1452AT/U1451A Insulation Tester

Capacitance Measurement

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

Contacting Agilent

You can contact Agilent Technologies at one of the following telephone numbers for warranty, service, or technical support information:

- In the United States: +1 800 829-4444
- In Canada: +1 877 894-4414
- In China: 800-810-0189
- In Europe: 31 20 547 2111
- In Japan: 0120-421-345

Or use our Web link for information on contacting Agilent worldwide:
www.agilent.com/find/assist

Or contact your Agilent Technologies Representative.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.






WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Safety and EMC Information

This meter is safety-certified in compliance with IEC/EN 61010-1:2010 for Category III 1000 V and Category IV 600 V; and IEC/EN 61557-1, IEC/EN 61557-2, IEC/EN 61557-4. EMC designed in compliance with IEC 61326-1:2005/EN 61326-1:2006. Use with standard or compatible test probes.

Safety Symbols

	Earth (ground) terminal
	Equipment protected throughout by double insulation or reinforced insulation
	Caution, risk of electric shock
	Caution, risk of danger (refer to the instrument manual for specific Warning or Caution information)
CAT III 1000 V	Category III 1000 V overvoltage protection
CAT IV 600 V	Category IV 600 V overvoltage protection
	Do not use in distribution systems with voltages higher than 600 V

For more details on any information not found in this document, refer to the *Agilent U1452A/U1452AT/U1451A Insulation Tester User's Guide*

Printed in Malaysia



U1451-90001

First Edition, December 1, 2013
© Agilent Technologies, Inc. 2013



Agilent Technologies