


Analog Weight Transmitter PS-1020

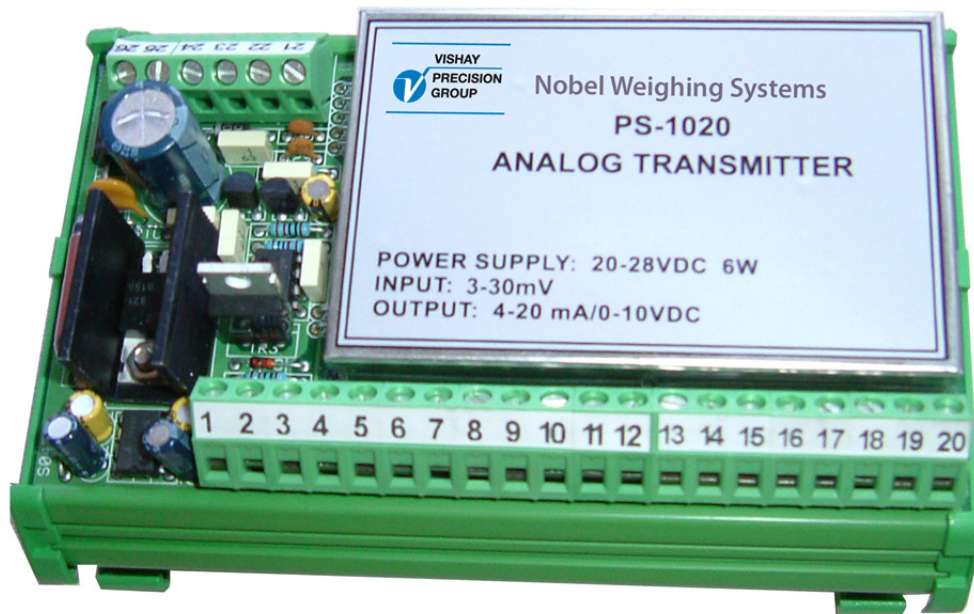

Installation and Operating Manual

LIST OF CONTENTS

Section 1, General information	
Introduction	3
Description	3
Specifications	4
Wiring connections	5
Section 2, Calibration	
Calculations	7
Calibration Procedure	8
Section 3, Options	
24 V Power Supply, PS-121	11
Appendices	
EC DECLARATION OF CONFORMITY for Analog Weight Transmitter PS-1020 ...	Appendix 1
EC DECLARATION OF CONFORMITY for 24 V Power Supply PS-121	Appendix 2

SECTION 1 GENERAL INFORMATION

Introduction

PS-1020 Analog Transmitters are electronic devices utilizing solid-state integrated components. They provide the user with a selectable voltage or current output directly proportional to the input signal within a specified linearity.

Description

The transmitters are intended for field mounting close to the vessel site, thereby reducing installation costs. An integral 20-connector terminal strip provides connections for up to four transducers, thus eliminating the need for a separate summing junction box.

Two screw type terminal strips provide connections for the supply voltage, transducer wiring, and analog outputs.

The zero and span adjustments for the analog outputs are accomplished with two sets of dip-switches and trim pots.

The units also include an adjustable filter which can be used to stabilize the output. Filtering is used to minimize the effects of vibration caused by agitators or other devices.

The standard packaging is an ABS plastic DIN-Rail mounted enclosure.

The transmitters are available with an optional 24 Vdc power supply enabling the unit to be operated with 115 Vac. For additional information, please refer to Section 3.

Specifications

PERFORMANCE

Full Scale Range	3 mV to 30 mV
Linearity	±0.2% of full scale
Excitation Voltage	10 Vdc
Load Current	200 mA (four - 350 ohm load cells)
Thermal Stability	28 ppm/°F (full scale range)

ENVIRONMENTAL

Operating Temperature	-10 to +40°C
Storage Temperature	-20 to +50°C
Relative Humidity	85% non-condensing

ELECTRICAL

Input Voltage	24 Vdc ±15%
Power Consumption	6 watts max

ANALOG OUTPUT (jumper selectable)

Voltage	0 to 10 Vdc (2kohm min load)
Current	0 to 20 or 4 to 20 mA (500 ohm max load)

CONFIGURATION

Coarse Zero	4-position DIP-switch
Fine Zero	20-turn trim pot
Coarse Span	4-position DIP-switch
Fine Span	20-turn trim pot
Analog Filter	adjustable, 270° turn trim pot

ENCLOSURE


Overall Dimensions	134 x 93 x 60 mm (L x H x D)
Mounting	DIN rail mount
Material	ABS Plastic
Weight	215 gram
Wiring Connections	terminal blocks, pitch 5 mm

OPTIONS

230 VAC Power Supply	DIN rail mount
----------------------	----------------

Vishay BLH is continually seeking to improve product quality and performance. Specifications may change accordingly.

FIGURE 1
Wiring Connections

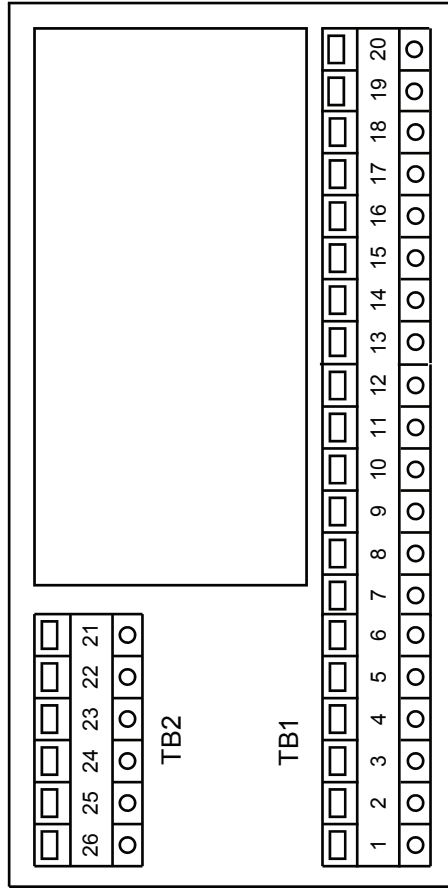

Mount the transmitter horizontally on a section of DIN-Rail with Terminal Block TB1 positioned on the bottom. If an optional 230 Vac to 24 Vdc power supply is used, the cable between the two devices must not exceed 1 meter.

The PS-1020 is designed to be installed in the field close to the vessel. Terminal strip TB1 provides connections for up to four transducers, thereby eliminating the need for a separate summing junction box.

TB1		TB2
1. - Excitation (cell # 1)	11. - Excitation (cell # 3)	21. + 0/20 or + 4/20 mA
2. + Excitation (cell # 1)	12. + Excitation (cell # 3)	22. + 0-10 Vdc
3. - Signal (cell # 1)	13. - Signal (cell # 3)	23. - Analog Output
4. + Signal (cell # 1)	14. + Signal (cell # 3)	24. - 24 Vdc (supply)
5. Shield	15. Shield	25. + 24 Vdc (supply)
6. - Excitation (cell # 2)	16. - Excitation (cell # 4)	26. Ground
7. + Excitation (cell # 2)	17. + Excitation (cell # 4)	
8. - Signal (cell # 2)	18. - Signal (cell # 4)	
9. + Signal (cell # 2)	19. + Signal (cell # 4)	
10. Shield	20. Shield	

NOTE: Some transducer manufacturers utilize a 6-conductor cable (+/- Sense leads). When using these type of transducers, the + Sense lead must be connected to the + Excitation terminal and the - Sense lead must be connected to the - Excitation terminal.

SECTION 2 CALIBRATION

Prior to calibrating the instrument perform the following calculations. This will enable you to determine where the dip-switches should be positioned for zero and span. Obtain the capacity and full scale output of the transducer/s from the calibration certificates. If required, convert them into the engineering units being used in the system.

Use the above values in the following formulas to determine the zero and span mV values.

Multiply the full scale mV/V output of the transducer/s by the excitation voltage to obtain mV.

Example: $3.0 \text{ mV/V} \times 10 \text{ Vdc} = 30 \text{ mV}$.

Zero (mV) = $Z \times O / C$

Z = Tare weight (vessel, agitator, etc)
O = Full scale output in mV
C = Total capacity of the transducers.

Set the zero adjustment dip-switches so the calculated value is within the minimum/maximum mV ranges given in Table 1 (page 9).

Span (mV) = $S \times O / C$

S = Net weight (live or product weight)
O = Full scale output in mV
C = Total capacity of the transducers.

Set the span dip-switches so the calculated value is within the minimum and maximum mV ranges given in Table 2 (page 10).

Sample calculation:

Three 1000 kg load cells, output = 3.0 mV/V

Tare weight = 500 kg.

Net weight = 2000 kg.

$3.0 \text{ mV/V} \times 10 \text{ Vdc} = 30 \text{ mV}$

Zero (mV) $500 \text{ kg} \times 30 \text{ mV} / 3,000 \text{ kg} = 5 \text{ mV}$

Table 1 dip-switch setting = Off, On, Off, Off (3.0 to 5.5 mV)

Span (mV) $2000 \text{ kg} \times 30 \text{ mV} / 3,000 \text{ kg} = 20 \text{ mV}$

Table 2 dip-switch setting = On, On, On, On (15.2 to 24.7 mV)

Calibration Procedure

Remove the metal cover to expose the dip-switches, jumpers and trim pots as shown in Figure 2 below.

Set the zero and span dip-switches so the calculated values are within the minimum and maximum mV ranges given in Tables 1 and 2.


Position jumper J1 for current or voltage output. See Figure 2.

Connect a digital multi-meter to terminal strip TB2 terminals 21 and 23 for current output or to terminals 22 and 23 for voltage output.

Apply power to the unit and allow a couple of minutes for the transmitter to warm up before making any adjustments.

Remove any weight from the system and adjust the fine zero trim pot for a reading 0 Vdc or 4 mA. Turn the trim pot clockwise to increase the output, or counter-clockwise to decrease the output.

FIGURE 2
Zero & Span Adjustments

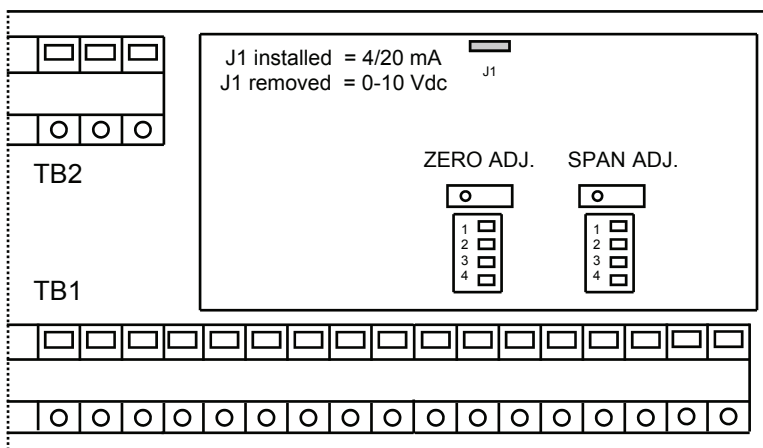

Calibration Procedure (cont'd)

Apply a known weight and adjust the fine span trim pot for the correct output. Turning the trim pot clockwise increases the output while turning it counter clockwise decreases the output.

Re-check “zero” and “span” calibration and re-adjust if required.

Replace the metal cover after calibration has been completed.

Analog Filter Adjustment

If the output is unstable under normal operating conditions, slowly turn the filter adjustment clockwise until the output stabilizes.

See Figure 3 (page 10) for location of the filter adjustment.


TABLE 1

1	2	3	4	mV min	mV max
OFF	OFF	OFF	OFF	-0.8	1.6
ON	OFF	OFF	OFF	1.2	3.7
OFF	ON	OFF	OFF	3.0	5.5
ON	ON	OFF	OFF	4.6	7.1
OFF	OFF	ON	OFF	5.9	8.4
ON	OFF	ON	OFF	7.2	9.7
OFF	ON	ON	OFF	8.3	10.8
ON	ON	ON	OFF	9.3	11.8
OFF	OFF	OFF	ON	10.2	12.8
ON	OFF	OFF	ON	11.0	13.6
OFF	ON	OFF	ON	11.8	14.3
ON	ON	OFF	ON	12.5	15.0
OFF	OFF	ON	ON	13.1	15.7
ON	OFF	ON	ON	13.7	16.2
OFF	ON	ON	ON	14.3	16.8
ON	ON	ON	ON	14.8	17.3

TABLE 2
Span Adjustment Dip-switches

1	2	3	4	mV min	mV max
OFF	OFF	OFF	OFF	2.6	2.8
ON	OFF	OFF	OFF	2.8	3.0
OFF	ON	OFF	OFF	3.0	3.2
ON	ON	OFF	OFF	3.2	3.5
OFF	OFF	ON	OFF	3.4	3.7
ON	OFF	ON	OFF	3.7	4.0
OFF	ON	ON	OFF	4.0	4.4
ON	ON	ON	OFF	4.3	4.9
OFF	OFF	OFF	ON	4.8	5.4
ON	OFF	OFF	ON	5.3	6.1
OFF	ON	OFF	ON	5.9	7.0
ON	ON	OFF	ON	6.8	8.2
OFF	OFF	ON	ON	7.8	9.7
ON	OFF	ON	ON	9.3	12.2
OFF	ON	ON	ON	11.6	16.5
ON	ON	ON	ON	15.2	24.7

FIGURE 3
Analog Filter Adjustment

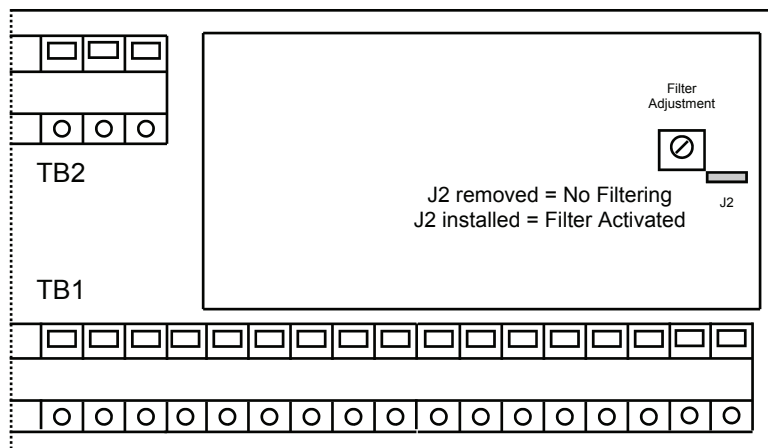

SECTION 3
OPTIONS

24 V Power Supply, PS-121

Specifications

Power

Input Voltage	230 Vac, 50/60 Hz
Output Voltage	24 Vdc (nominal)
Power Consumption	10 VA maximum
Fuse	T 160 mA
Isolation	Class II

Environmental

Operating Temp. Range	-10 to +40°C
Storage Temp. Range	-20 to +50°C
Relative Humidity	85% non-condensing

Enclosure


Dimensions (L x H x D)	50 x 90 x 60 mm
Mounting	35 mm DIN-Rail
Material	ABS Plastic
Weight	360 g

Installation

- Make sure the installation complies with local regulations and electrical codes.
- Connect AC voltage to the terminals marked “L” and “N”.
- The DC voltage is available on the terminals marked “+” and “-”.
- A red LED is illuminated when the power supply is “ON”.

Refer to Figure 4 on the following page for terminal locations.

FIGURE 4
PS-121 Power Supply

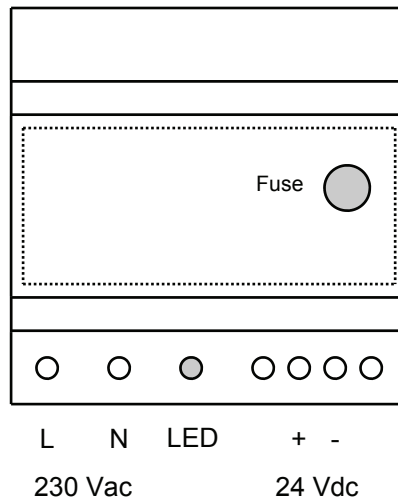

Fuse Replacement

- The following procedures require work inside the power supply enclosure and should be performed by qualified Vishay service personnel.
- Before opening the unit, disconnect the AC voltage.
- Remove the front cover from the power supply.
- Press down gently on the cover of the fuse holder, and turn counter-clockwise.
- Pull out the cover and fuse as an assembly, replace fuse with a new one.
- Re-install fuse and cover as an assembly, press down gently and turn clockwise.
- Replace the front cover on the power supply.
- Re-apply AC voltage to the unit.

In the event of a malfunction, please contact the nearest Vishay service office for assistance. Any attempt to modify or repair the power supply will void the manufacturers warranty.

EC DECLARATION OF CONFORMITY



**We: Vishay Nobel AB
Box 423
S-691 27 KARLSKOGA
SWEDEN**

Hereby declares that the product: **PS-1020**
Complies with the essential requirements of the directives 89/336/CEE, 93/68/CEE
when used for its intended purpose

The product is made in accordance with the following standards

ELECTROMAGNETIC COMPATIBILITY:

**EN 50081-1
EN 61000-6-2**

The CE mark has been applied on the product

Karlskoga, May 07, 2004

A handwritten signature in black ink, appearing to read 'Bengt Schultz', is written over a horizontal dotted line. The signature is fluid and cursive.

Bengt Schultz, Managing director

APPENDIX 1

EC DECLARATION OF CONFORMITY



We: Vishay Nobel AB
Box 423
S-691 27 KARLSKOGA
SWEDEN

Hereby declares that the product: **PS-121**
Complies with the essential requirements of the directives 73/23/CEE, when used for its intended purpose

The product is made in accordance with the following standards

ELECTROMAGNETIC COMPATIBILITY:

EN 61000-3-2
EN 61000-3-3

ELECTRICAL SAFETY:

EN 61010-1

The CE mark has been applied on the product

Karlskoga, May 07, 2004

A handwritten signature in black ink, appearing to read 'B. Schultz', is written over a horizontal dotted line.

Bengt Schultz, Managing director

APPENDIX 2

Document no. 35202
Article no. 600 690 R2
© Vishay Nobel AB, 2011-06-22
Subject to changes without notice.

Vishay Nobel AB
Box 423, SE-691 27 Karlskoga, Sweden
Phone +46 586 63000 · Fax +46 586 63099
pw.se@vishaypg.com
www.weighingsolutions.com